

Float Frame Brackets

Counter Balance®

FLOAT FRAME


Under-The-Counter Bracket

Specifications and Installation

- Low-profile brackets provide a clean, "floating" look for your kitchen countertop
- Mounts on wall studs to create the look of floating vanities, foyer benches, mantles, reception areas, utility counters, and many other designs for that "free-floating" look
- Heavy-duty 12 gauge steel construction with load limits of 750lb per bracket
- Available in 18" & 24" lengths
- Patented "C" clamp design for easy installation to existing framing with minimal damage to existing drywall, tile, or other wall coverings
- Promotes the safest, cleanest, and most hygienic installation by eliminating legs to floor and other woodwork that can trap bacteria, viruses, and other undesirables



Weight capacity is based on evenly distributed static loads

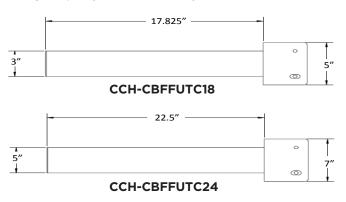

• Available in 18" and 24"



SKU: CCH-CBFFUTC

AVAILABLE COLOR:



Chemical Concepts

Call To Order (800) 220-1966 410 Pike Road • Huntingdon Valley, PA 19006

www.chemical-concepts.com



Float Frame Brackets

Counter Balance®

FLOAT FRAME Under-The-Counter Bracket

Specifications and Installation

Surface Mounted Installation:

To install Float Frame Counter brackets in an existing finished wall, first locate the studs in the wall and design your lay-out.


- Select the Float Frame size needed using the chart below, finding the weight capacity of your selected bracket. We recommend a maximum bracket spacing of 32" on center based on standard counter top materials.
- For each Float Frame location, cut the drywall on each side of the stud to allow the mounting flanges to slide in on each side of the stud. A rectangle may also be removed to fully expose the stud and mount the Float Frame directly to the stud.
- Temporarily mount the Float Frame using drywall screws and the small holes in the face of the flange.
- Mount all other Float Frames in a similar fashion. Adjust and level Float Frames to be in plane and permanently fasten the Float Frames to the studs using lag bolts in the large holes in the face of the flange.

Open Wall Installation:

To install Float Frame Counter brackets in an open wall design your lay-out.

- Select the Float Frame size needed using the chart below, finding the weight capacity of your selected bracket. We recommend a maximum bracket spacing of 32" on center based on standard countertop materials.
- For each Float Frame Counter bracket location, temporarily mount the Float Frame using drywall screws in the small holes in the face of the flange.
- Mount all other Float Frames in a similar fashion. Adjust and level Float Frames to be in plane and permanently fasten the Float Frames to the studs using lag bolts through the holes in the side flanges.





SKU: CCH-CBFFUTC

AVAILABLE COLOR:





Call To Order (800) 220–1966 410 Pike Road • Huntingdon Valley, PA 19006 www.chemical-concepts.com