


# Counter Top Setting Instructions

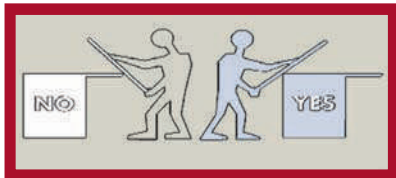

NEVER set tops directly on plate or bracket at an angle when setting tops.

ALWAYS set tops from opposite side of stud wall or from front of cabinet.



**Chemical Concepts**  
410 Pike Road  
Huntingdon Valley, PA 19006

Order online at [counterbalanceshop.com](http://counterbalanceshop.com) or call 1.800.220.1966

These are general guidelines for installation methods, and may not apply to your application. Always consult a qualified contractor and follow their recommendations for proper installation.


MADE IN USA



## CounterBalance®

Concealed / Extended  
Concealed Bracket

**CCH-CBCB | CCH-CBCBE**

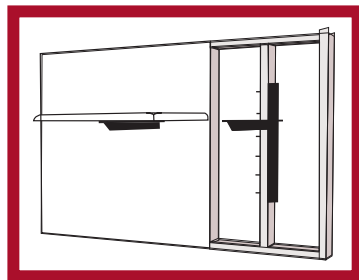

Check out our installation videos:  
[youtube.com/user/ShopCB](https://www.youtube.com/user/ShopCB)



# COUNTER

# BALANCE®

The support you don't see.


## Installation Instructions

The CounterBalance **Concealed / Extended Concealed Bracket** are designed to attach to load-bearing studs. The Concealed / Extended Concealed Bracket can support an overhang extending 6" beyond the length of the bracket as per industry standard recommendations. These products are available in many useful sizes and come in a variety of colors to match your surface.

### Concealed & Extended Concealed Bracket Install

- 1) Select the appropriate size bracket for your counter surface. The overhang should be maximum of 6" longer than the bracket and a minimum of 3" to reduce visibility.

Supports should be spaced no more than 16" to 20" apart for optimum performance

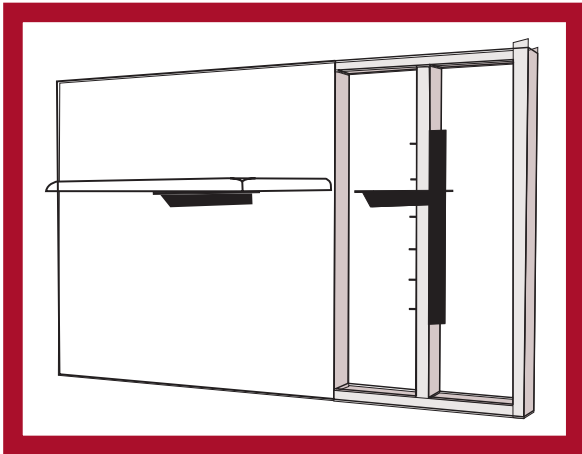

- 2) The **Concealed Bracket** is designed to attach to vertical wood studs behind drywall or other wall covering. For installation on a finished wall, first remove the wall covering in the area where the bracket is to be installed to gain access to the studs. For new construction, proceed to Step 3.
- 3) Place the bracket to the right of the stud at the desired height, flush with the surface of the stud, check for level and mark on the stud for each hole to be drilled.
- 4) Drill 3/8" hole through entire stud at the locations marked.
- 5) Place bracket back into position and secure with supplied 3/8"-16 x 3" carriage bolts.
- 6) Repeat for additional brackets. Brackets should be placed every 16" to 20" for optimum performance. Install/patch drywall or other wall covering around installation area.
- 7) Apply a silicone sealant to the top of the brackets to secure them to the underside of the counter surface

The CounterBalance **Concealed / Extended Concealed Brackets** are easy installs to support overhangs on stone and solid surface countertops. These products give your customers alternative to banging their knees on pricey corbels and provide superior support and security. These low-profile brackets are hidden from view offering a clean, modern look.